
MAHLE

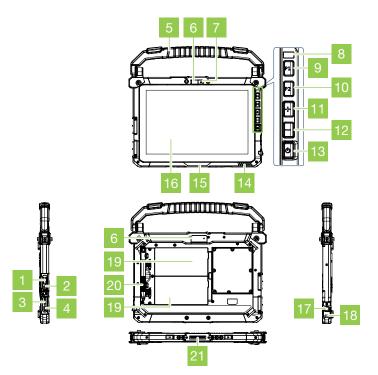


| Main components | | 12 | 2 | Volume down |
|-----------------|-----------------------|----|---|-------------------|
| 1 | USB 2.0 connector | 13 | 3 | Power button |
| 2 | Combo audio connector | 14 | | Speaker |
| 3 | Micro SD card slot | 15 | ; | Indicators |
| 4 | USB 3.2 Gen 1 Type-C | 16 | ; | Touchscreen |
| 5 | Handle | 17 | | Power connector |
| 6 | Camera lens | 18 | 3 | Kensington lock |
| 7 | Microphone | 19 |) | Battery pack |
| 8 | Light sensor | 20 |) | Stylus |
| 9 | Brightness up | 21 | | Docking connector |
| 10 | Brightness down | | | |
| 11 | Volume up | | | |




INSTALLING THE BATTERY

1. Install the battery packs

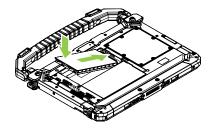


 2. Lock the battery packs



CHARGING THE BATTERY

 1. Connect the AC adapter to charge the battery






Use only the charger supplied by the manufacturer.




Do not charge/discharge or place the battery in high-temperature locations.

INITIAL STARTUP

 1. Press the power button for 3 seconds



 2. Follow the screen instructions





Please refer to the CONNEX 2 MDT800 manual for the actual use of the device.





www.brainbee.mahle.com www.mpulse.mahle.com This Quick Guide is available in additional languages: scan QR Code to download them

